


# UV Bracelet

## Contents:

- Pony (colored) beads (2 bags)
- UV beads (1 bag - 145g)
- 4 oz. portion cups (10)
- Drawstring bags (5)
- UV flashlight (1)
- Pipe cleaners (1 bag)
- Signs and guides packet (SHAPCO)
- 12" x 9" x 4" box

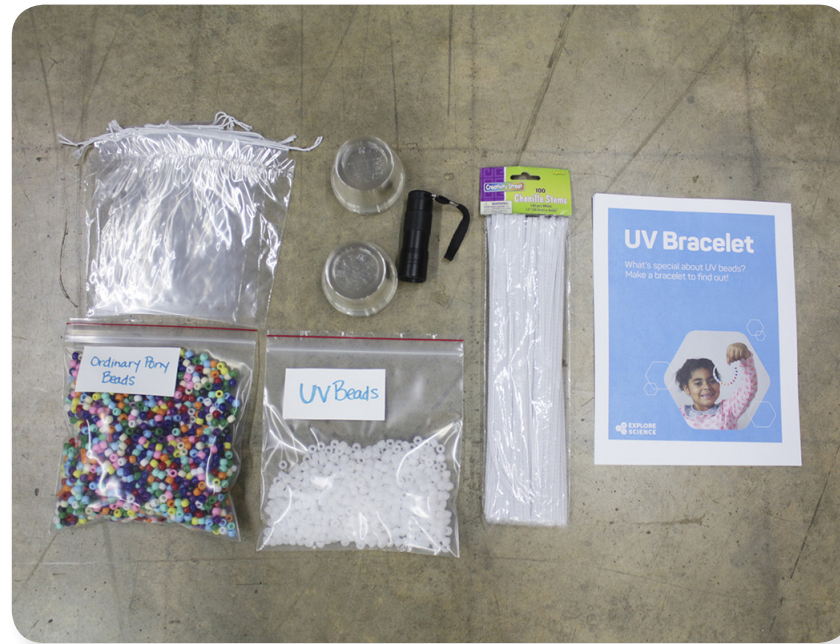

## Fabrication/packing instructions:

1. Kit the drawstring bags.  
Each will contain two 4 oz. portion cups.
2. Remove the UV flashlight from its packaging.  
Unscrew the flashlight. Take the battery holder out.  
Throw the two paper discs inside away.  
Put the flashlight back together.
3. Test the flashlight. Turn it on and back off.



# UV Bracelet (cont'd)

## Fabrication/packing instructions:

4. Weigh 140-145g of UV (white beads) in a container.
5. Transfer the UV beads to an 8"x 8" baggie. Affix the *UV beads* sticker to the baggie.
6. Pour two bags of pony beads into an 8" x 8" baggie.
7. Affix the Pony beads sticker to the baggie.
8. Place the bags of beads, pipe cleaners and flashlight in the box.
9. Place the drawstring bags on top of the previous items.
10. Place the Signs and Guides packet on top.
11. Seal the box with packing tape. Place a 2" x 4" *UV Bracelets* sticker in the top left hand corner of the box.

